



# DIRECTIONS FOR DISASSEMBLY & REASSEMBLY OF PRICE AOD 30 SRT\*

\*BODY: STAINLESS STEEL 316 (S)  
DIAPHRAGMS: RUBBER (R)  
BALLS: TEFLON (T)

**CAUTION:** Before any maintenance or repair is attempted, the compressed air line to the pump should be disconnected and all air pressure allowed to bleed from the pump. Disconnect all intake, discharge, and air lines. Drain the pump by turning it upside down and allowing any fluid to flow into a suitable container. Be aware of any hazardous effects of contact with your process fluid.

The **PRICE AOD 30** has a 25 mm (1") inlet and outlet. 1" BSP connection

**AVAILABLE MOCs:**

- Polypropylene
- PVDF
- SS
- AL

**TOOLS REQUIRED:**

- Wrench
- Allen Wrench
- Adjustable Wrench
- Vise equipped with soft jaws (such as plywood, plastic or other suitable material)



**STEP 2 (Fig 2)**

Utilizing a wrench, remove the bolts that fasten the discharge manifold to the liquid chambers. (Fig 2)



**STEP 5 (Fig 5)**

Remove the bolts which fasten the suction manifold to the liquid chambers. (Fig 5)



**STEP 3 (Fig 3)**

Lift away the discharge manifold to expose the valve balls and seats. (Fig 3)



**STEP 6 (Fig 6)**

Lift suction manifold from liquid chambers and centre section to expose intake valve balls and seat. Inspect ball cage area of liquid chamber for excessive wear and damage. (Fig 6)

## DISASSEMBLY



**STEP 1 (Fig 1)**

Before starting disassembly, mark a line from each liquid chamber to its corresponding air chamber. This line will assist in proper alignment during reassembly. (Fig 1)



**STEP 4 (Fig 4)**

Remove the discharge valve balls, O-rings and seats (Fig 4) from the liquid chambers and inspect for nicks, gouges, chemical attack or abrasive wear. Replace worn parts with genuine PRICE parts for reliable performance.



**STEP 7 (Fig 7)**

Remove the discharge valve balls, O-rings and seats (Fig 7) from the liquid chambers and inspect for nicks, gouges, chemical attack or abrasive wear. Replace worn parts with genuine PRICE parts for reliable performance.



**STEP 8 (Fig 8)**

Normally inlet and discharge manifolds should not be disassembled during regular pump maintenance. Should this be necessary, completely remove clamp bands and inspect O-rings for nicks, cuts and chemical attack. (Fig 8)




**STEP 11 (Fig 11)**

Using an adjustable wrench, or by rotating the diaphragm by hand, remove the diaphragm assembly. (Fig 11)



**STEP 13 (Fig 14)**

To remove diaphragm assembly from shaft, secure shaft with soft jaws (a vise fitted with plywood or other suitable material) to ensure shaft is not nicked, scratched, or gouged. Using an adjustable wrench or by hand, remove diaphragm assembly from shaft. Inspect all parts for wear and replace with genuine PRICE parts if necessary. (Fig 14)

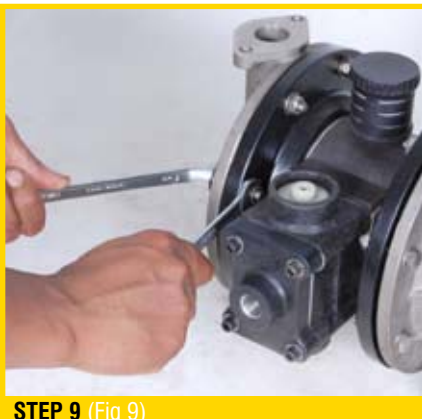

**STEP 9 (Fig 9)**

Remove one set of bolts, which secure one liquid chamber to the center section. (Fig 9)



**STEP 12 (Fig 12)**

NOTE: Due to varying torque values, one of the following two situations may occur:  
 1) The lock nut (outer piston), diaphragm and holding plate (inner piston) remain attached to the shaft and the entire assembly can be removed from the center section (Fig 12).  
 2) The lock nut (outer piston), diaphragm and holding plate (inner piston) separate from the shaft which remains connected to the opposite side diaphragm assembly (Fig 13). Repeat disassembly instructions for the opposite liquid chamber. Inspect diaphragm assembly and shaft for signs of wear or chemical attack. Replace all worn parts with genuine PRICE parts for reliable performance.



**STEP 10 (Fig 10)**

Lift liquid chamber away from center section to expose diaphragm and lock nut (outer piston). (Fig 10)

## REASSEMBLY

Upon performing applicable maintenance to the air distribution system, the pump can now be reassembled. Please refer to the disassembly instructions for photos and parts placement. To reassemble the pump, follow the disassembly instructions in reverse order. The air distribution system needs to be assembled first, then the diaphragms and finally the wetted parts. Please find the applicable torque specifications on this page. The following tips will assist in the assembly process.

- Clean the inside of the center section shaft bushing to ensure no damage is done to new seals.
- Stainless bolts should be lubed to reduce the possibility of seizing during tightening.
- Ensure proper alignment on the sealing surfaces of intake and discharge manifolds.
- Liquid chambers are easier to attach when the diaphragm is inverted. Prior to attaching the second water chamber, push diaphragm assembly so that it is as close as possible to the center section.
- PVDF pumps require Teflon® gasket kits for improved sealing. Gasket kits may be installed on other pumps where sealing is an issue.

## MAXIMUM TORQUE SPECIFICATIONS

| DESCRIPTION OF PART            | PLASTIC PUMPS        |
|--------------------------------|----------------------|
| AIR VALVE                      | 3.4m-N[30in.-lbs.]   |
| LOCK NUT (OUTER PISTON)        | 51.5m-N[38ft.-lbs.]  |
| SMALL CLAMP BAND               | 9.6m-N[85in.-lbs.]   |
| NUT - BOLTS (Rubber Diaphragm) | 18.6m-N[165in.-lbs.] |
| NUT - BOLTS (Teflon Diaphragm) | 18.6m-N[165in.-lbs.] |



# DIRECTIONS FOR DISASSEMBLY & REASSEMBLY OF AIR VALVE / CENTER BLOCK FOR PRICE AOD 30\*

\*WITH RUBBER DIAPHRAGMS


## TOOLS REQUIRED:

- Adjustable Spanner
- 1/4" Spanner
- 5/16" Spanner
- Circlip Plyer
- Vise equipped with soft jaws (such as plywood, plastic or other suitable material)



**STEP 2** (Fig 2)

Remove diaphragms from the centre block. (Fig 2)

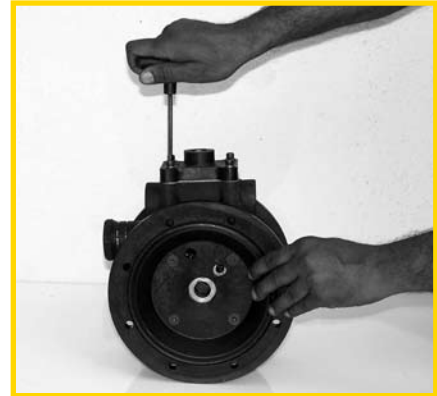

**STEP 5** (Fig 5)

Remove the piston block from the shaft block and air cover. (Fig 5)



**STEP 3** (Fig 3)

Remove the main shaft and check it. Replace it if worn out. (Fig 3)



**STEP 6** (Fig 6)


If there is no leakage of air from the air cover, do not dismantle air cover. (Fig 6)

## DISASSEMBLY



**STEP 1** (Fig 1)

Remove the locknuts with the help of a spanner.

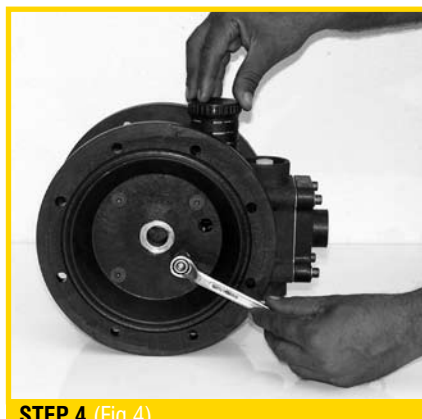


**STEP 4** (Fig 4)

Unscrew the pilot shaft nuts. Take out the pilot shaft. If found bent or worn out, replace it. (Fig 4)



**STEP 7** (Fig 7)

Remove circlip from piston block, check the piston block gasket. Replace it if damaged or worn out. (Fig 7)

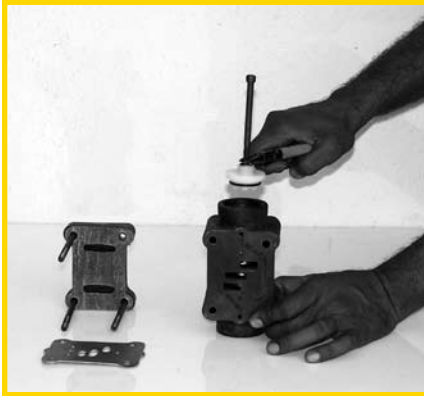


**STEP 8** (Fig 8)

Take out the piston block cap by using mounting bolts. Check the cap with 'O' ring. (Fig 8)



**STEP 11** (Fig 11)

Remove air covers. (Fig 11)

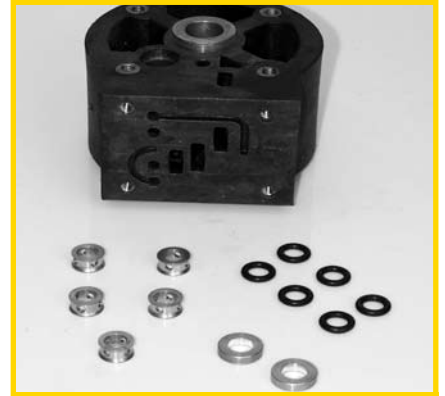

**STEP 14** (Fig 14)

Check the pilot shaft bushes and 'O' rings. Replace them if worn out or damaged. (Fig 14)



**STEP 9** (Fig 9)

Remove the piston and check it. Replace it if worn out. Check the piston rings as well. Clean the piston with solvent. (Fig 9)



**STEP 12** (Fig 12)

Check the shaft block gaskets and air covers. Replace them if worn out. (Fig 12)

**ASSEMBLY**

For assembly, follow the reverse procedure.



**STEP 10** (Fig 10)

Open allen bolts to remove the air cover.



**STEP 13** (Fig 13)

Remove all the pilot bushes and O-rings.